

Formulation Example

S 26-51 Multi Purpose Balm Confident Touch

Ingredients

A

Xirona® Le Coeur
Xirona® Le Rouge
RonaFlair® Flawless

RonaFlair® Satin
Dry Flo PC

B

RonaCare® Poppy SE

Preservatives

C

Antaron™ V-220 F
Microcrystalline Wax SP-19
Microcrystalline Wax SP-88
DUB SSIC
Ozokerite Wax Pastilles SP-1020P
Myritol® 331
Isopropyl Myristate
Myritol® 318

INCI US

[%]

(1)	IRON OXIDES (AND) SILICA	11.80
(1)	IRON OXIDES (AND) SILICA	6.00
(1)	SILICA (AND) TITANIUM DIOXIDE (AND) IRON OXIDES	10.00
(1)	ILLITE	3.00
(2)	ALUMINUM STARCH OCTENYLSUCCINATE	5.00
(1)	CAPRYLIC/CAPRIC TRIGLYCERIDE (AND) PAPAVER RHOEAS EXTRACT (AND) TOCOPHEROL	2.00
		q.s.
(3)	PVP/EICOSENE COPOLYMER	2.00
(4)	MICROCRYSTALLINE WAX	2.30
(4)	MICROCRYSTALLINE WAX	2.30
(2)	ISOCETYL STEAROYL STEARATE	2.60
(4)	OZOKERITE	8.60
(5)	COCOGLYCERIDES	11.30
(5)	ISOPROPYL MYRISTATE	12.20
(5)	CAPRYLIC/CAPRIC TRIGLYCERIDE	add 100.00

Procedure:

Heat the ingredients of phase C to 90°C while stirring until all waxes are melted. Cool down to 80°C. Add premixed phase A while moderate stirring and stir until homogeneous. Afterwards add phase B. Pour the mixture into desired packaging.

Notes:


Appearance: intense red soft waxy balm

Stability: 3 months @ RT; Daylight; 5°C; FTC -5/+40°C; 40°C

Suppliers:

(1) Merck KGaA, Darmstadt, Germany / EMD Performance Materials Corp.
(3) Ashland Industries Europe GmbH
(5) BASF AG

(2) Azelis Germany GmbH
(4) Rossow

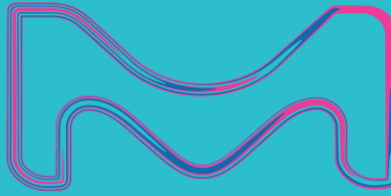

Formulation Example

Products are warranted to meet the specifications set forth on their label/packaging and/or certificate of analysis at the time of shipment or for the expressly stated duration. EMD Performance Materials Corp. provides information and advice on application technologies and relevant regulations based upon its current knowledge and opinion. EMD PERFORMANCE MATERIALS CORP. MAKES NO REPRESENTATION OR WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING MERCHANTABILITY OR FITNESS FOR A PARTICULAR USE REGARDING OUR PRODUCTS, THEIR APPLICATION OR ANY INFORMATION PROVIDED IN CONNECTION THEREWITH. EMD Performance Materials Corp. shall not in any event be liable for incidental, consequential, indirect, exemplary or special damages of any kind resulting from any use or failure of the products. Customer is responsible for and must independently determine the suitability of our products for its intended use and processes. The foregoing information and suggestions are also provided without warranty of non-infringement as to intellectual property rights of third parties and shall not be construed as any inducement to infringe the rights of third parties. Customer shall be responsible for obtaining any applicable third party intellectual property licenses. All sales are subject to our complete Terms and Conditions of Sale. Prices are subject to change without notice. EMD Performance Materials Corp. reserves the right to discontinue products without prior notice.

© 2024 Merck KGaA, Darmstadt, Germany and/or its affiliates. EMD Electronics, the vibrant M, Colorona, Timiron, Xirona, RonaFlair, Ronastar, Ronaflux, Candurin, Eusolex, Parteck, OxyneX, RonaCare, IR3535, UV-Pearls, ASCIII, Luremin and Emblica are trademarks of Merck KGaA, Darmstadt, Germany or its affiliates. All other trademarks are the property of their respective owners. Detailed information on trademarks is available via publicly accessible resources.